ARAT Telephone mount

Type: **Volkswagen Golf Mk 4 + BORA**

Part No: 1250

ARAT GmbH
Spezialhalterungen
für Autotelefone u.-Navigationssysteme

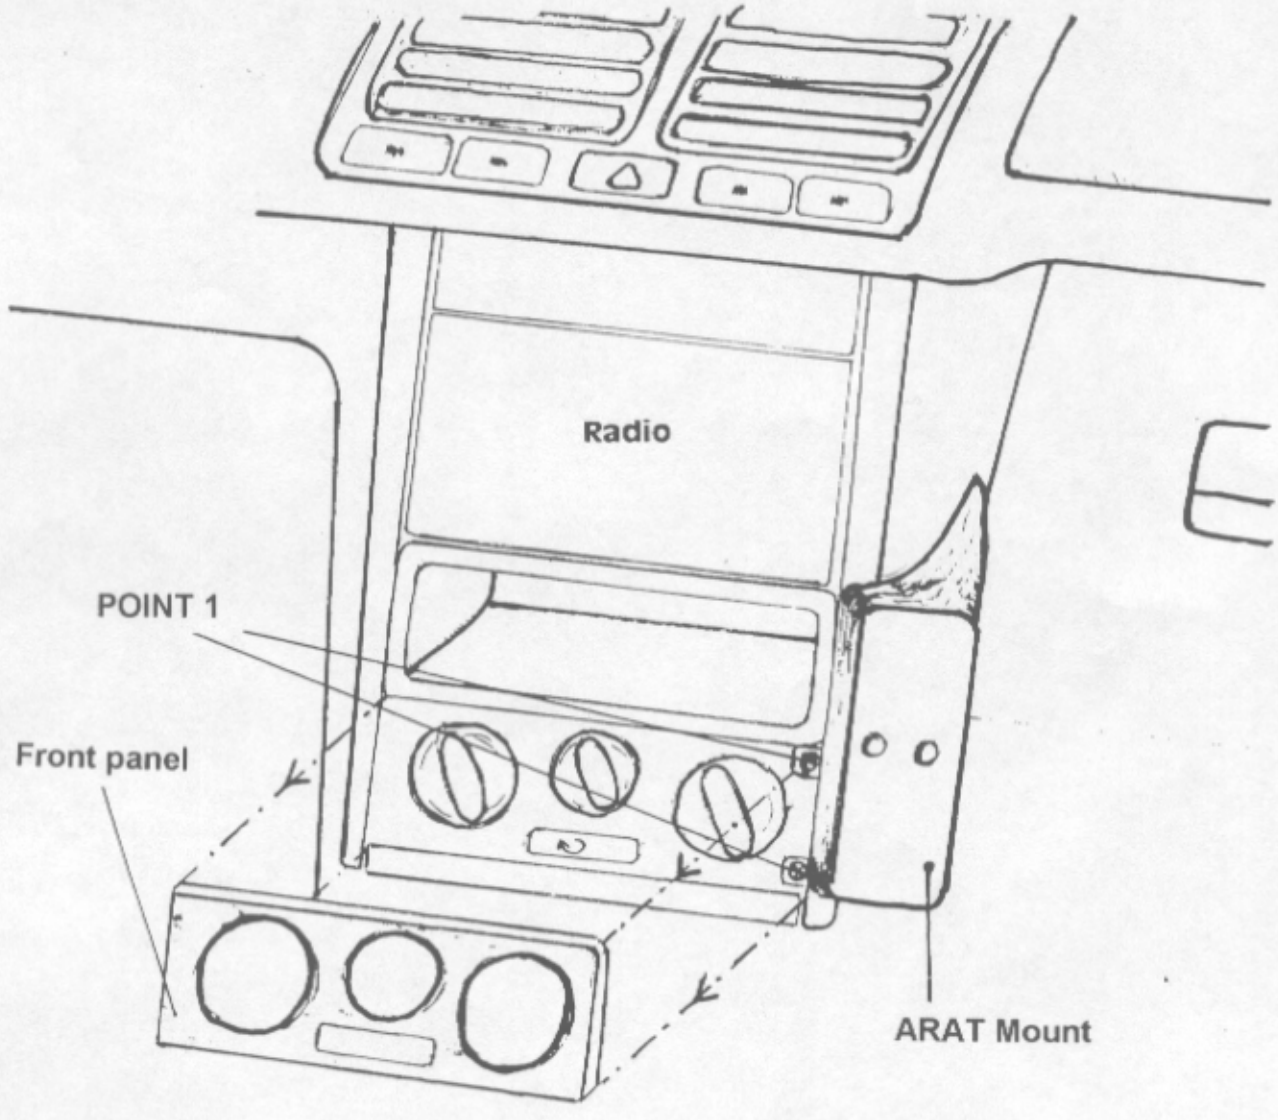

Installation instruction

1. Remove the front panel, by simply prizing it off
2. Remove the screws at POINT 1
3. Place the ARAT mount to the contours of the dashboard, with the previously removed screws at POINT 1, secure the mount through the metal bracket
4. Replace the front panel